


ELEMENTS OF ARCHITECTURAL STRUCTURES:
FORM, BEHAVIOR, AND DESIGN

ARCH 614

DR. ANNE NICHOLS

SPRING 2019

lecture
twenty one

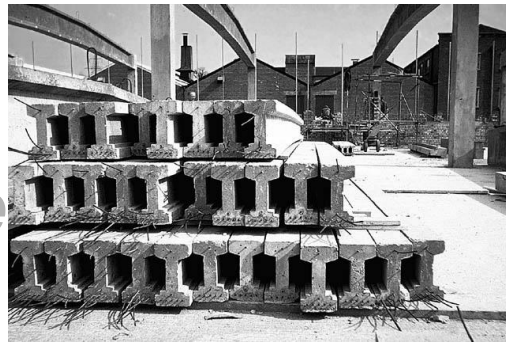

<http://nisee.berkeley.edu/godden>

concrete construction:
materials & beams

Concrete Beams 1
Lecture 21

Elements of Architectural Structures
ARCH 614

S2009abn

Concrete Beam Design

- composite of concrete and steel
- American Concrete Institute (ACI)
 - design for maximum stresses
 - limit state design
 - service loads x load factors
 - concrete holds no tension
 - failure criteria is yield of reinforcement
 - failure capacity x reduction factor
 - factored loads < reduced capacity
 - concrete strength = f'_c




Concrete Beams 2
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Concrete Construction


- cast-in-place
- tilt-up
- prestressing
- post-tensioning

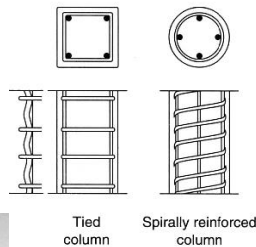

Concrete Beams 3
Lecture 21

<http://nisee.berkeley.edu/godden>


Elements of Architectural Structures
ARCH 614

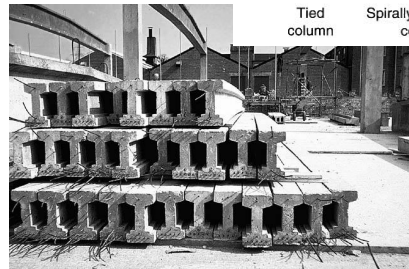

S2007abn

Concrete

- low strength to weight ratio
- relatively inexpensive
 - Portland cement
 - aggregate
 - water
- hydration
- fire resistant
- creep & shrink

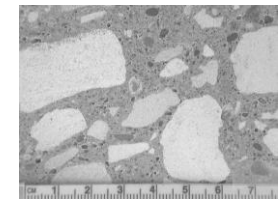

Concrete Beams 4
Lecture 21

Elements of Architectural Structures
ARCH 614



S2007abn

Reinforcement

- deformed steel bars (rebar)
 - Grade 40, $F_y = 40$ ksi
 - Grade 60, $F_y = 60$ ksi - most common
 - Grade 75, $F_y = 75$ ksi
 - US customary in # of 1/8" ϕ
- longitudinally placed
 - bottom
 - top for compression reinforcement
 - spliced, hooked, terminated...




Concrete Beams 5
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Behavior of Composite Members

- plane sections remain plane
- stress distribution changes

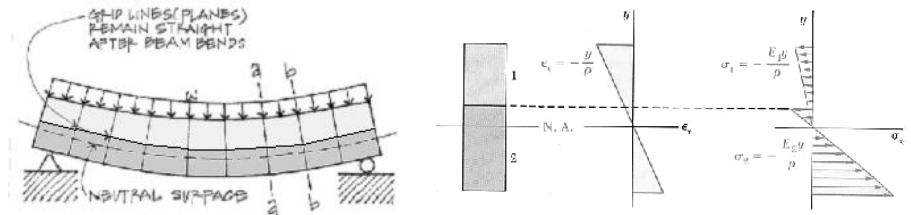

$$f_1 = E_1 \varepsilon = -\frac{E_1 y}{R} \quad f_2 = E_2 \varepsilon = -\frac{E_2 y}{R}$$

Concrete Beams 6
Lecture 21


Elements of Architectural Structures
ARCH 614

S2007abn

Transformation of Material

- n is the ratio of E 's

$$n = \frac{E_2}{E_1}$$
- effectively widens a material to get same stress distribution

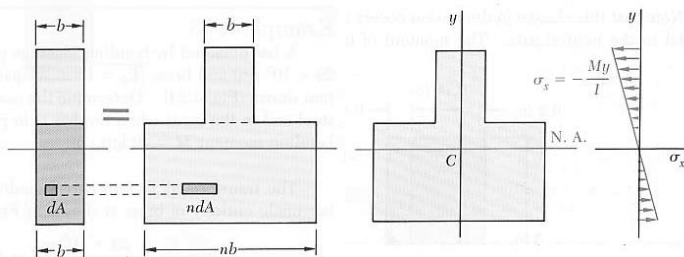

Concrete Beams 7
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Stresses in Composite Section

- with a section transformed to one material, new I
 - stresses in that material are determined as usual
 - stresses in the other material need to be adjusted by n

$$n = \frac{E_2}{E_1} = \frac{E_{steel}}{E_{concrete}}$$

$$f_c = -\frac{My}{I_{transformed}}$$


$$f_s = -\frac{Myn}{I_{transformed}}$$

Concrete Beams 8
Lecture 21


Elements of Architectural Structures
ARCH 614

S2007abn


Reinforced Concrete - stress/strain

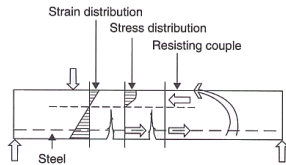


Stresses in the concrete above the neutral axis are compressive and nonlinearly distributed. In the tension zone below the neutral axis, the concrete is assumed to be cracked and the tensile force present to be taken up by reinforcing steel.

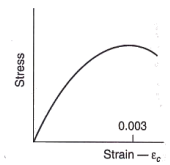


Typical stress-strain curve for concrete.

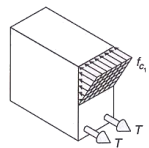

Working stress analysis. (Concrete stress distribution is assumed to be linear. Service loads are used in calculations.)

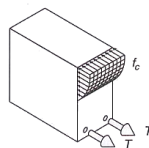

Actual stress distribution near ultimate strength (nonlinear).

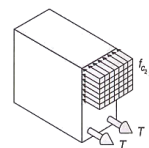


Ultimate strength analysis. (A rectangular stress block is used to idealize the actual stress distribution. Calculations are based on ultimate loads and failure stresses.)

FIGURE 6-37 Reinforced concrete beams. Elements of Architectural Structures ARCH 614


Reinforced Concrete Analysis

- for stress calculations
 - steel is transformed to concrete
 - concrete is in compression above n.a. and represented by an equivalent stress block
 - concrete takes no tension
 - steel takes tension
 - force ductile failure

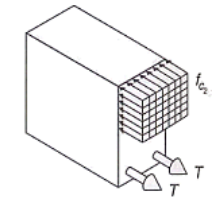

Location of n.a.


- ignore concrete below n.a.
- transform steel
- same area moments, solve for x

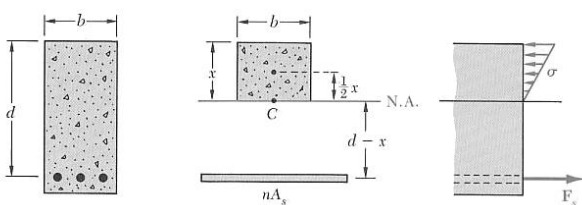

$$bx \cdot \frac{x}{2} - nA_s (d - x) = 0$$

T sections

- n.a. equation is different if n.a. below flange

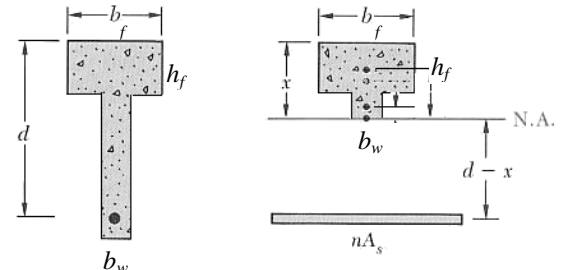

$$b_f h_f \left(x - \frac{h_f}{2} \right) + (x - h_f) b_w \frac{(x - h_f)}{2} - nA_s (d - x) = 0$$

ACI Load Combinations*

- $1.4D$
- $1.2D + 1.6L + 0.5(L_r \text{ or } S \text{ or } R)$
- $1.2D + 1.6(L_r \text{ or } S \text{ or } R) + (1.0L \text{ or } 0.5W)$
- $1.2D + 1.0W + 1.0L + 0.5(L_r \text{ or } S \text{ or } R)$
- $1.2D + 1.0E + 1.0L + 0.2S$
- $0.9D + 1.0W$
- $0.9D + 1.0E$

*can also use old
ACI factors


Concrete Beams 13
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Force Equations

- $C = 0.85 f'_c b a$
- $T = A_s f_y$
- where
 - f'_c = concrete compressive strength
 - a = height of stress block
 - β_1 = factor based on f'_c
 - x = location to the n.a.
 - b = width of stress block
 - f_y = steel yield strength
 - A_s = area of steel reinforcement

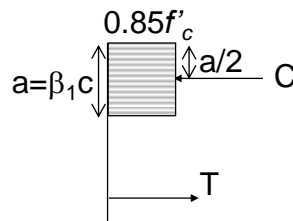


Concrete Beams 15
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Reinforced Concrete Design

- stress distribution in bending

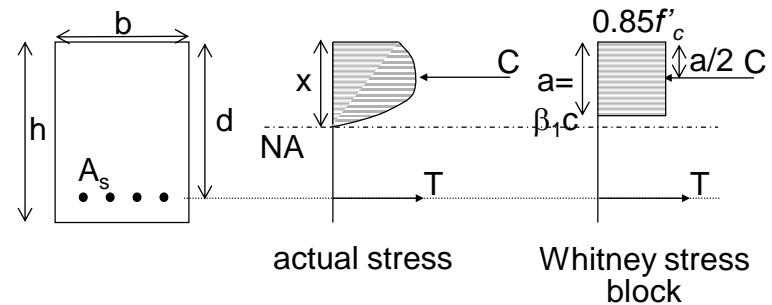

Wang & Salmon, Chapter 3


Concrete Beams 14
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Equilibrium

- $T = C$
- $M_n = T(d-a/2)$
– d = depth to the steel n.a.
- with A_s
 - $a = \frac{A_s f_y}{0.85 f'_c b}$
 - $M_u \leq \phi M_n$ $\phi = 0.9$ for flexure
 - $M_u = \phi T(d-a/2) = \phi A_s f_y (d-a/2)$

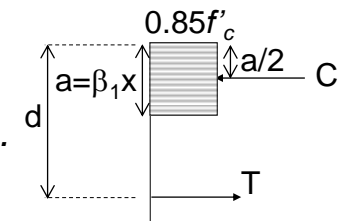



Concrete Beams 16
Lecture 21

Elements of Architectural Structures
ARCH 614

S2007abn

Over and Under-reinforcement

- over-reinforced
 - steel won't yield
- under-reinforced
 - steel will yield
- reinforcement ratio

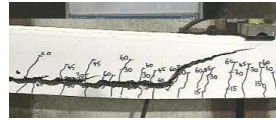

http://people.bath.ac.uk/abstj/concrete_video/virtual_lab.htm

- $\rho = \frac{A_s}{bd}$
- use as a design estimate to find A_s, b, d
- max ρ is found with $\epsilon_{steel} \geq 0.004$ (not ρ_{bal})

A_s for a Given Section

- several methods
 - guess a and iterate
 1. guess a (less than $n.a.$)
 2. $A_s = \frac{0.85 f'_c b a}{f_y}$
 3. solve for a from $M_u = \phi A_s f_y (d-a/2)$

$$a = 2 \left(d - \frac{M_u}{\phi A_s f_y} \right)$$
 4. repeat from 2. until a from 3. matches a in 2.

A_s for a Given Section (cont)

- chart method
 - Wang & Salmon Fig. 3.8.1 R_n vs. ρ

1. calculate $R_n = \frac{M_n}{bd^2}$


2. find curve for f'_c and f_y to get ρ

3. calculate A_s and a


- simplify by setting $h = 1.1d$

Reinforcement

- min for crack control
- required $A_s = \frac{3\sqrt{f'_c}}{f_y} (bd)$
- not less than $A_s = \frac{200}{f_y} (bd)$
- $A_{s-max} : a = \beta_1 (0.375d)$
- typical cover
 - 1.5 in, 3 in with soil
- bar spacing

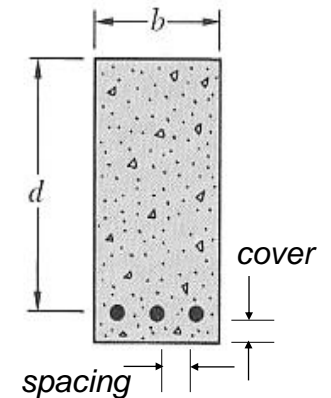

Approximate Depths

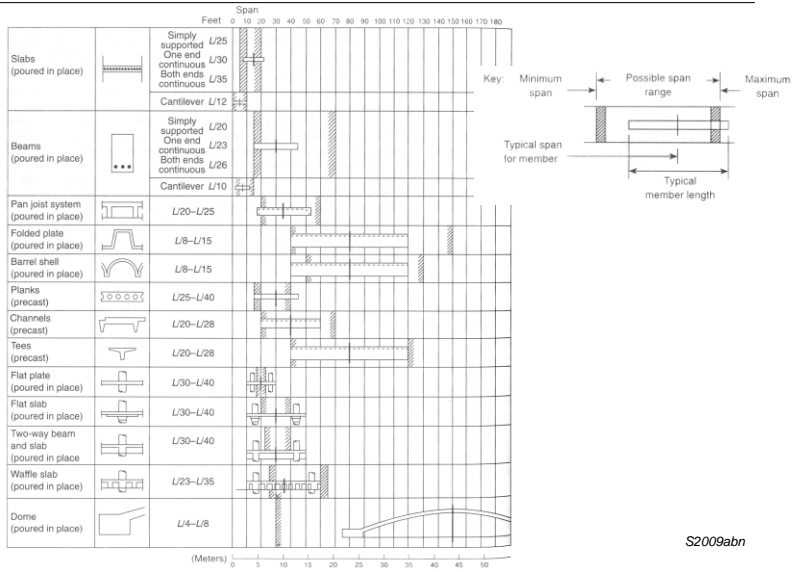

Concrete
Lecture :

S2009abn